


# EPDS

IMPACT 1000 Series

## Battery Removal Guide

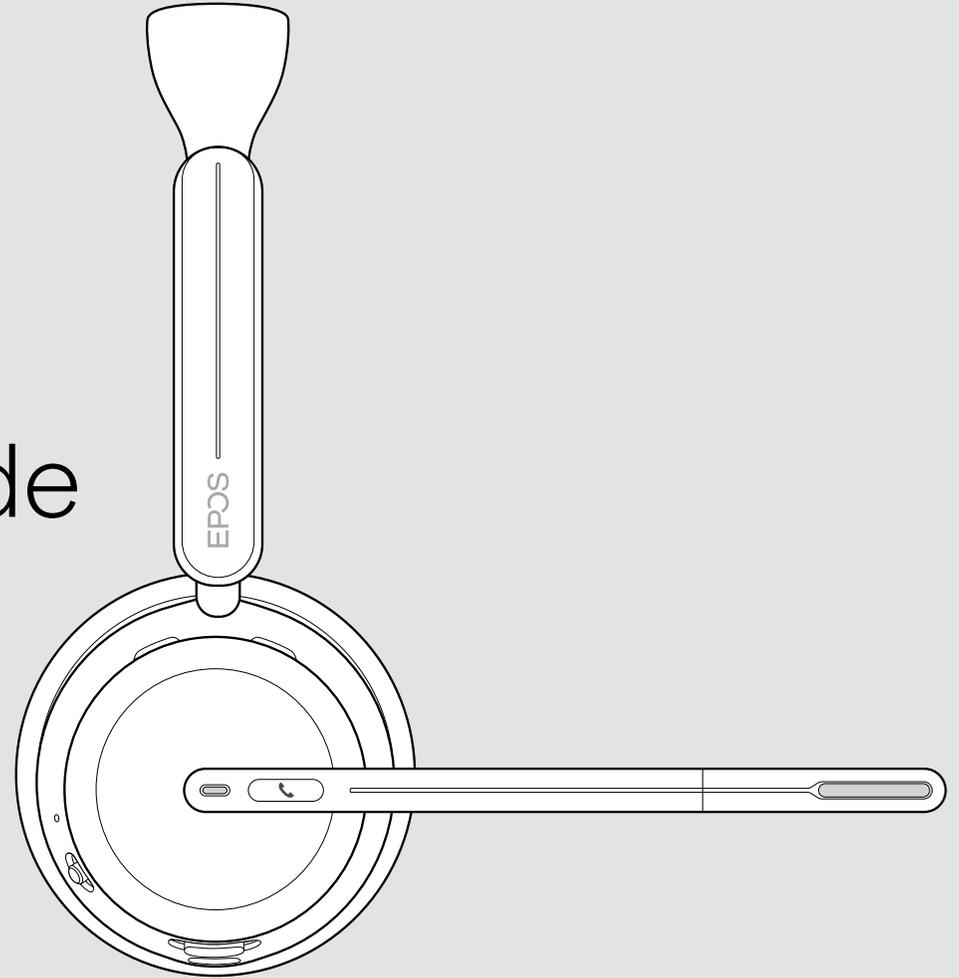

DSEA A/S





Kongebakken 9, DK-2765 Smørum, Denmark

[eposaudio.com](http://eposaudio.com)

Publ. 03/23, A01






THE POWER OF AUDIO

# Battery Removal Guide

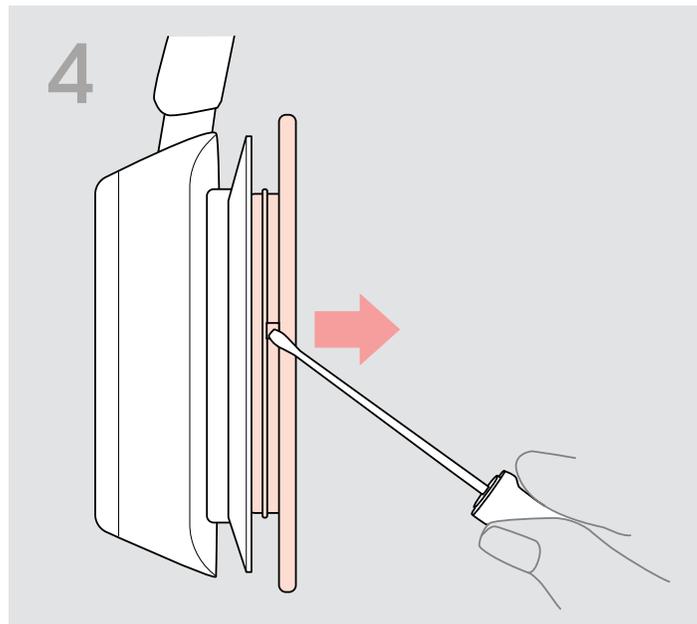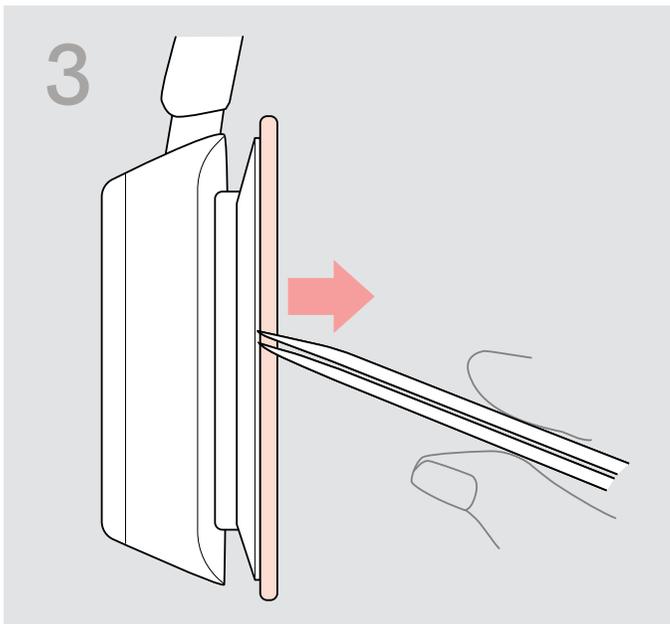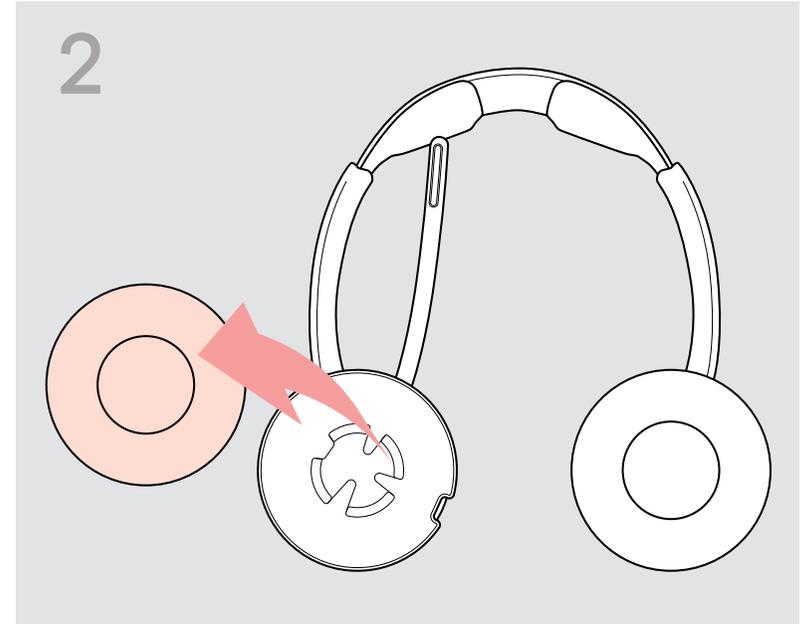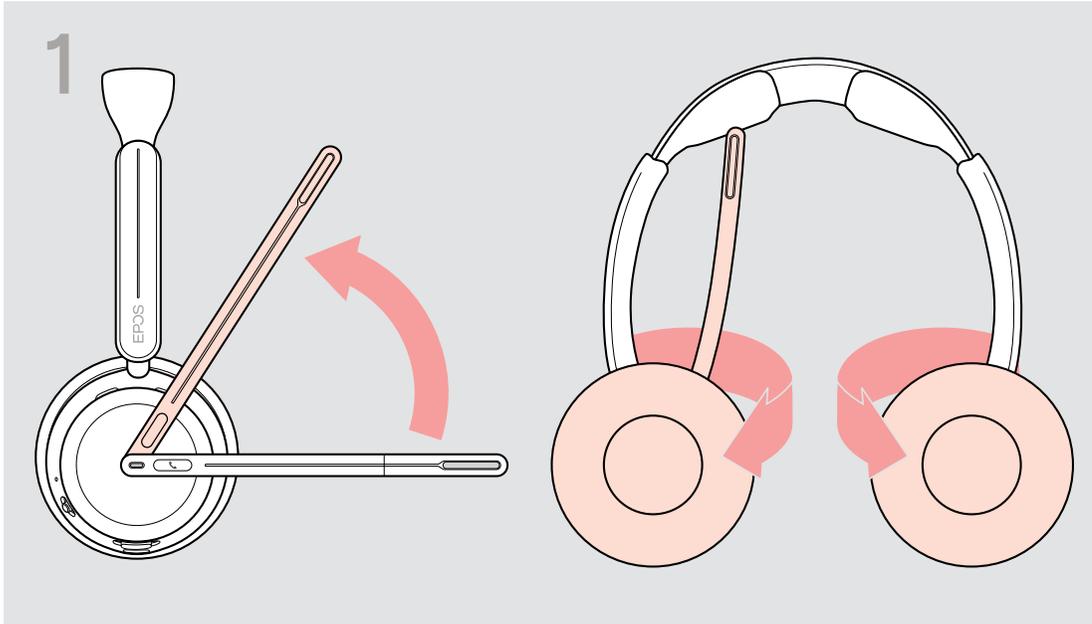

1. Lift the boomarm and twist in the ear cup(s).
2. Peel off the ear pad from the ear cup: microphone side.
3. Loosen and lift the trim ring e.g. with a pair of tweezers.
4. Press into the small hole (e.g. with a screwdriver) to loosen the locking catch. Take out the transducer.

# Battery Removal Guide

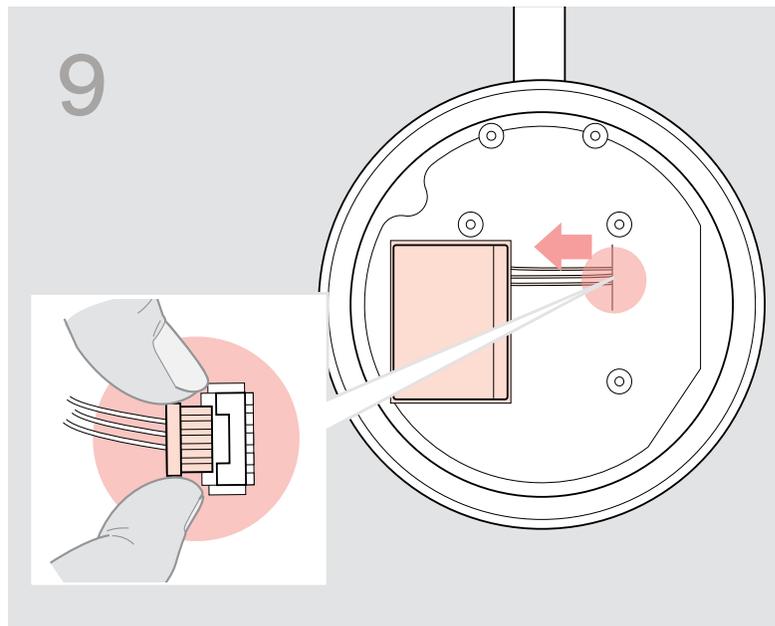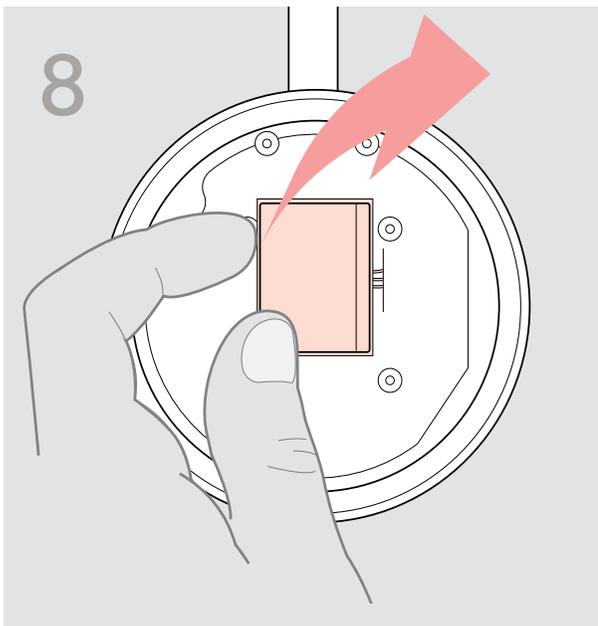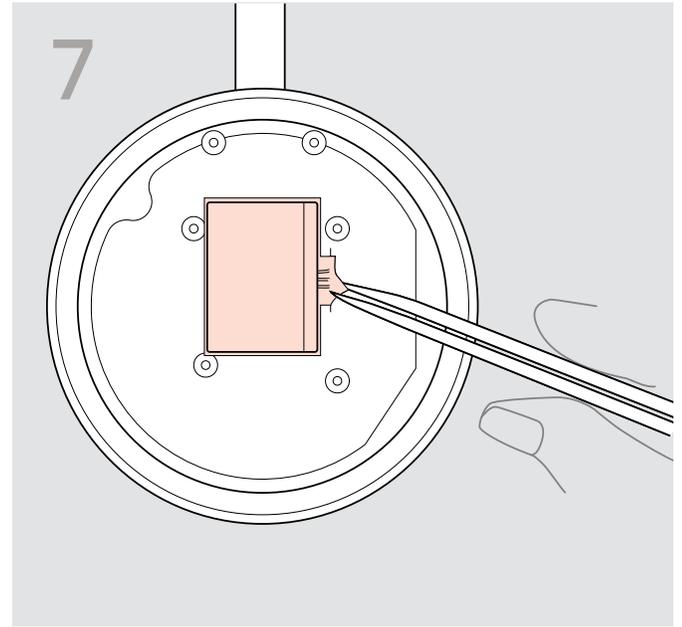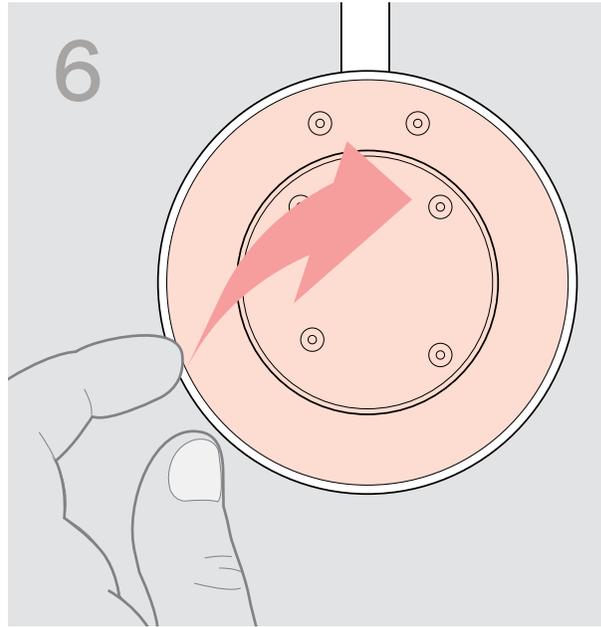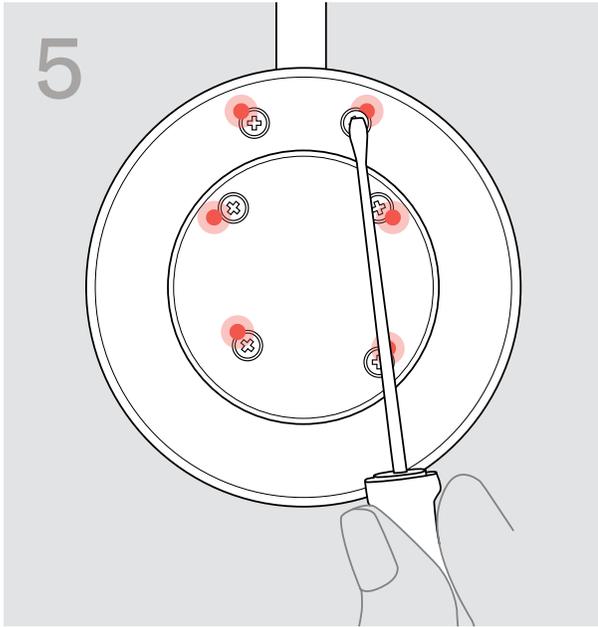

5. Remove the 6 screws with a screwdriver.
6. Remove the cover.
7. Remove the part of the sticker that covers the cables e.g. with a pair of tweezers
8. Lift the rechargeable battery.
9. Unplug the connector and remove the rechargeable battery.